

 
 MULTISPORT PRIXTON DV650

 
WIFI



PRIXTON

Features

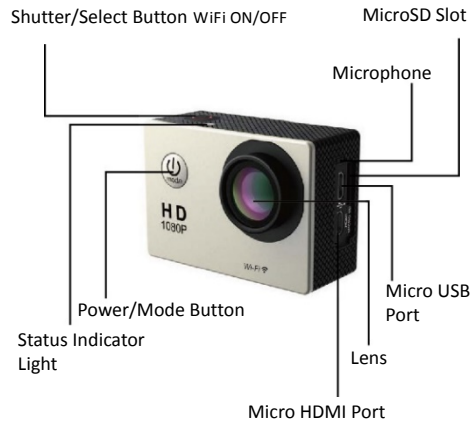

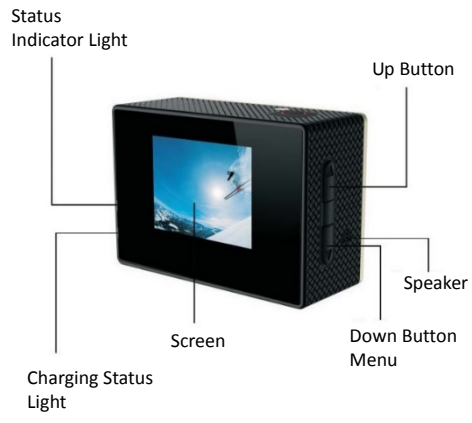


Battery Door Latch



Battery Door

 Waterproof Housing

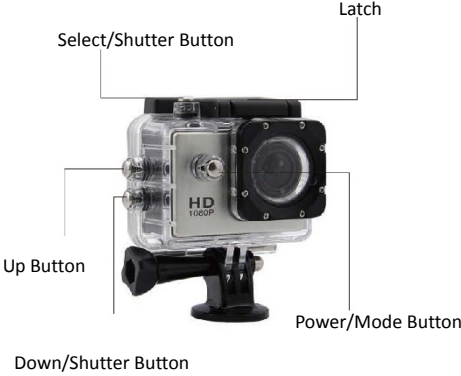

Accessories


 <p>Waterproof Housing</p>	 <p>Handle Bar/Pole Mount</p>	 <p>Mount 1</p>
 <p>Mount 2</p>	 <p>Mount 3</p>	 <p>Adhesives</p>
 <p>Manual</p>	 <p>USB Cable</p>	 <p>Helmet Mounts</p>
 <p>Clip</p>	 <p>Bandages</p>	 <p>Battery</p>

1. Video



Record Video

 2. Playback (Event, Video or JPEG)



3. Settings (Video Settings, Photo Settings, and System Settings)

To access to Video Settings, go to the Video mode and press the down button. To access the Photo Settings, go to the Photo mode and press the down button.

a. Video Settings:



You can then choose different settings such as

Movie Size:1080P 30fps or 720p 60fps

Micro SD Card	1080p 30fps	720p 60fps
32GB	240mins	320mins
16GB	120mins	160mins
8GB	60mins	80mins
4GB	30mins	40mins

You can also choose Video Quality, Seamless Mode, White Balance mode, Motion Detection - useful in driver mode so you can save battery and memory space, and Date Stamp display.

b.Photo Settings:



You can select different resolutions up to 12 MP, White Balance modes, Driver/Timer modes, Burst mode, Date Stamp Display.

c.System Settings:



- 1) Sounds: On/Off, Start-up 1/2/3/None, Beep On/Off, Volume 0/1/2/3
- 2) Power Frequency: 50Hz/60Hz/Auto
- 3) Panel Protect(Screen Saver): Off/1 mins/3 mins/5 mins
- 4) Power Save: Off/1 mins/3mins/5mins
- 5) Date&Time: YY/MM/DD
- 6) Language: English/Simplified Chinese/Traditional Chinese/France/Spanish/Italian/Portuguese/Dutch/Polish/Russian/Japanese
- 7) Format: No/Yes
- 8) IR mode
- 9) Reset All: No/Yes
- 10) Version

Capturing Video +Photos

To capture the photos and videos, click on the button
OK/Shutter modes.

Storage/MicroSD Cards

This camera is compatible with 4GB,16GB, and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities

Charging the Battery

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

- 1.Connect the camera to a computer or USB power supply.
- 2.The Charging Status Light remains ON while the battery is charging.
- 3.The Charging Status Light will turn OFF when the battery is fully charged.

Connecting to the iSmart DV App

The iSmart DV App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the iSmart DV App to your smartphone or tablet at the Apple App Store or Google Play.
2. Press the Power/Mode Button to power camera ON.
3. Press the OK/Shutter button for 3 seconds until you see "waiting for WIFI connection"
4. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Action Cam" followed by a series of numbers.
5. Enter the password "1234567890"
6. Open the iSmart DV App on your smartphone or tablet.

Compatibility

The iSmart DV App is compatible with some smartphones and tablets listed below.

