

Declaration

1. Reproduction, transfer, distribution, or storage of part or all of the Contents in this document in any form without the prior written permission of The company is prohibited.

2. This manual goes in to correct and complete but not to ensure there are no errors or omissions. The company will not be responsible for the errors or omissions in this manual.

3. The company operates a policy of ongoing development. The company reserves the right make change and improvement to any of the products described in this document without prior notice.

4. To the maximum extent permitted by applicable law, under no circumstances shall The company be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Attention

This section is for users to use M2 properly, to ensure M2 operates well, read carefully and follow the guidance below.

1. Do not puncture the device .
2. Do not expose the band to solvents such as benzene , thinner.
3. Do not expose the band to strong magnetic field and electric field.
4. Do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun in an unattended vehicle .
5. Do not puncture or incinerate the device or battery.
6. Replaceable coin cell batteries may contain perchlorate material special handling may apply

1. Install Droihealth to your phone

Use scan two-dimensional code download directly




For Android For IOS
Search for Droihealth in Google Play or App Store

*Android 4.3 + , IOS 8.0 +


2. Accessory

M2 Bracelet accessories

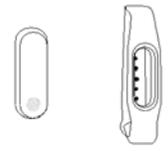

Bracelet body spire lamella


3. Assemble and wear wristbands

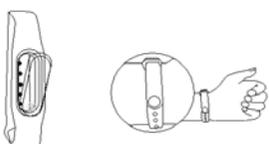

The main body into the groove of the wristband Bracelet wear schematic

4. Pairing M2 and your phone


Launch Droihealth App and sign up ,then pair M2 with the app . When you bind M2 , click the button to complete the binding .

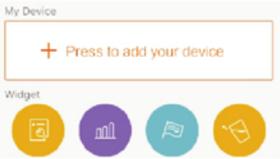


2. Green Bluetooth logo (as picture 2) is displayed after a successful connection , while the watch will vibrate and Bluetooth connectivity icon appears.



5. Using your M2
Click the button to switch the function touch.


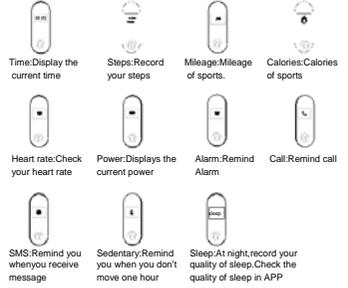


6. Charge M2 on charger base

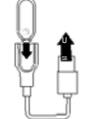

7. M2 Spec

system configuration
 Battery Capacity :70MAh; Standby Time: 300 Hour
 Input Voltage : 5 V Weight Net Weight : 6 .9g
 Material: Plastic ABS TPU Elastomer
 Total Length : 235 mm
 Adjustable length:155-210mm
 Width :19mm watchband
 Display:0.42inch OLED HR:Green
 Bluetooth:BT4.0 compatible (Android and IOS)
 Touch:Touch mode button
 Waterproof: IP 67
 Sensor : Low -power acceleration sensor
 Packaging : carton , data cable , manual
 Function: Deployment
 SMS : Bluetooth sync reminders
 Time : OLED display 24 for mu la
 Pedometers : Sports pedometer,motion o do meter
 Calls to remind : shock(calls , SMS , We Chat , QQ etc .)
 Sleep Monitoring : Monitoring the quality of sleep
 Charging Interface : USB for mula
 Standby time: 300hours
 Alarm Tip: Phone settings(clock)
 APP Share: sports status

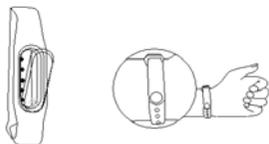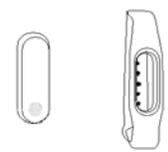

2. Green Bluetooth logo (as picture 2) is displayed after a successful connection , while the watch will vibrate and Bluetooth connectivity icon appears.

